

#### Order #XXXXX MOD-1143 Counter

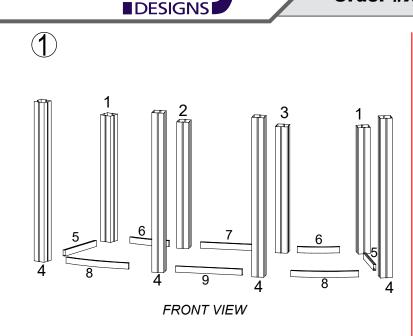


© 2023


Assemble lower horizontal extrusions [5,6,7,8,9] between vertical extrusions [1,2,3] & [4].

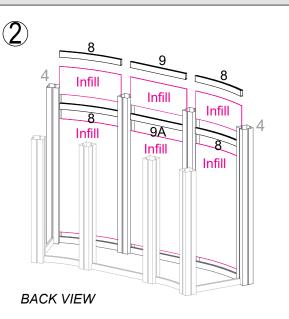


Insert lower & upper front infills between verticals [4], securing with horizontal extrusions [8,9,9A].

6

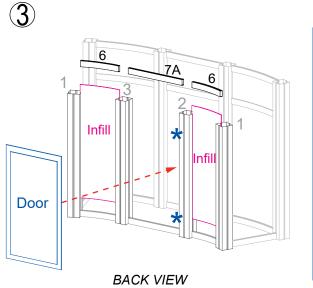

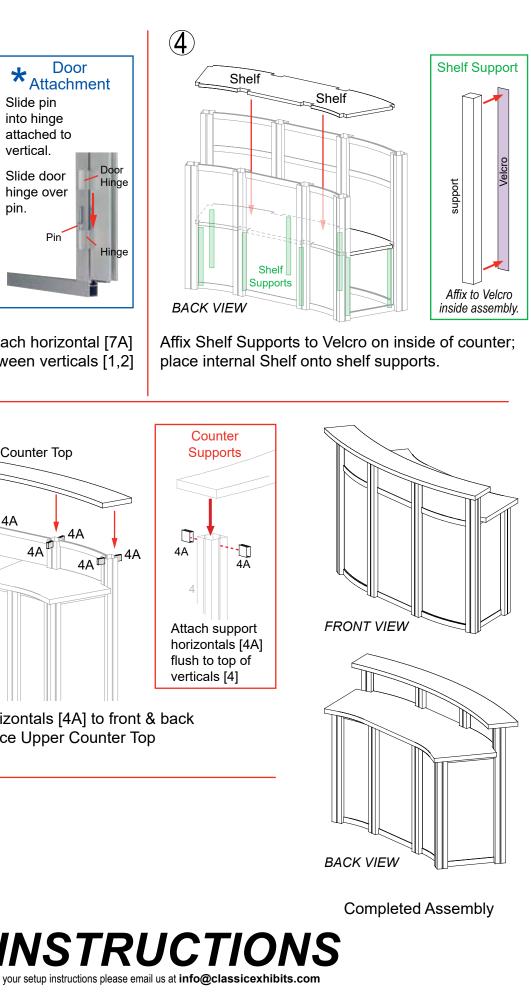

Install Door between verticals [2,3]. Then attach horizontal [7A] between verticals [2,3]. Slide back infills between verticals [1,2] & [3,4] & secure with upper horizontals [6].

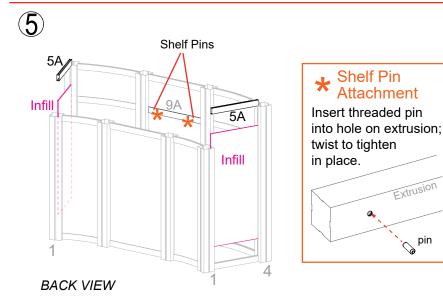


Insert side infills between verticals [1,4], then attach horizontals [5A] between verticals, securing infills. Attach Shelf Pins to horizontal [9A].

| O under Tax |
|-------------|
| Counter Top |
| Counter top |
|             |
|             |

Place Lower Counter Top onto counter assembly.

Counter Top Attachment Align hole with pin. 2 Rotate pin. Spring will push pin into hole.

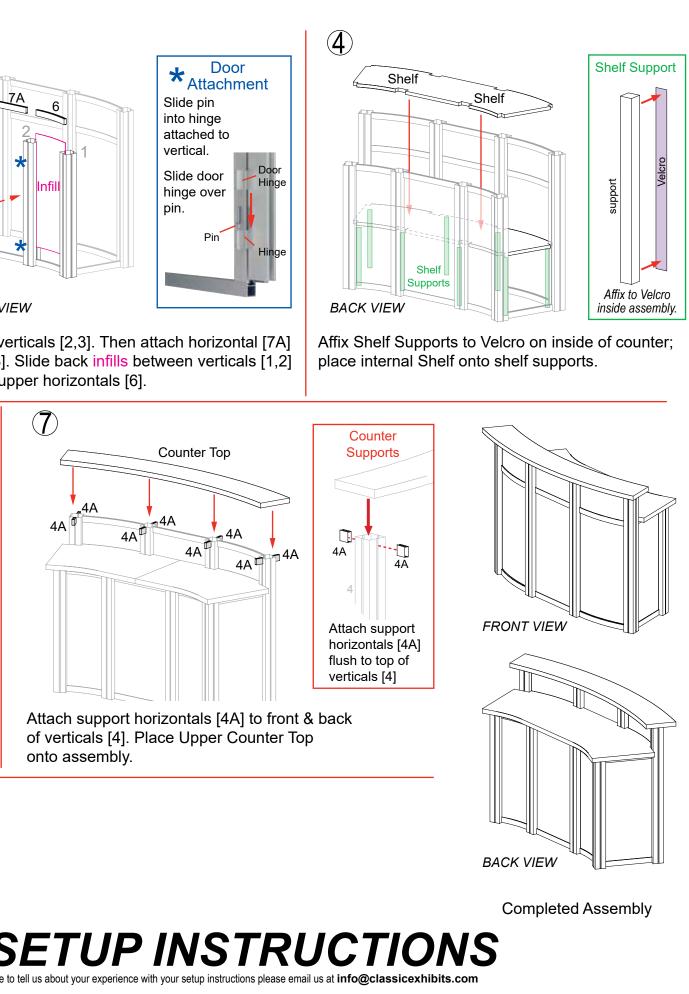


Qty. Description Item Item 2 38"h Q914 Vertical Extrusion 6 1 38"h Q914 Vertical Extrusion w/ Door Hardware 7/7A 2.3 1.1 48"h Q914 Vertical Extrusion 8 4 4 9 Horizontal Counter Supports 4A 8 9A 2/2 5/5A 16"w Z45 Horizontal Extrusion

Qty. Description

12.4563"Z45 curved Horizontal Extrusion 4

- 19.573"w Z45 Horizontal Extrusion 1/1
- 6 20"w Z45 curved Horizontal Extrusion
- 2 20"w Z45 Horizontal Extrusion
- 1 20"w Z45 Horizontal Extrusion w/ counter connection

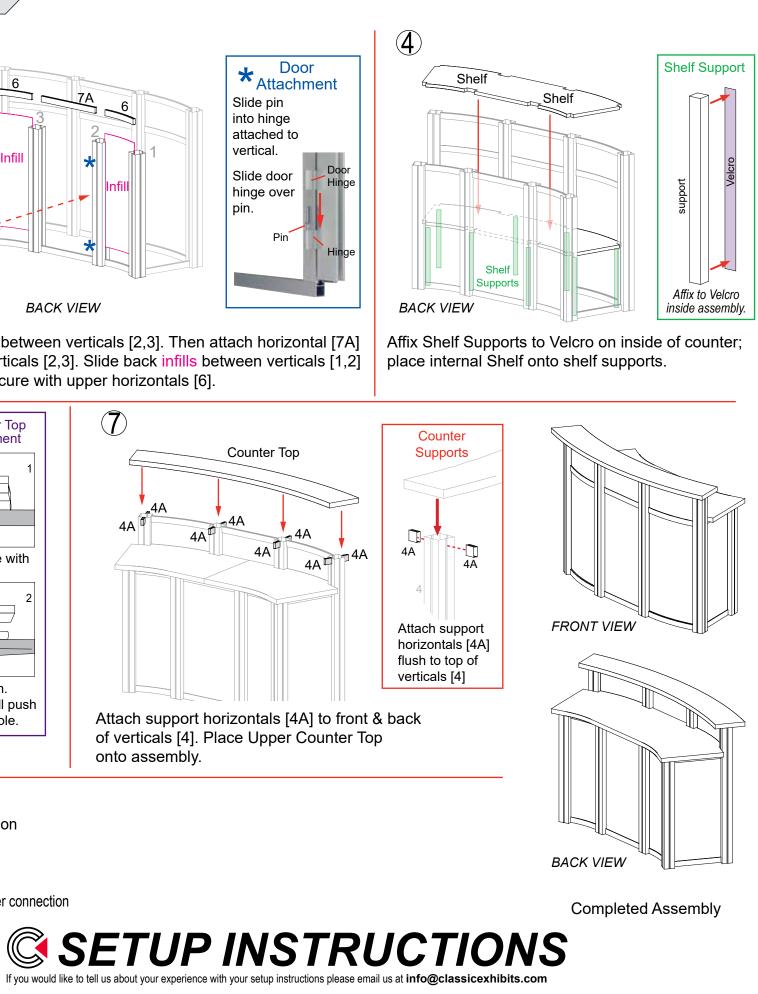


www.classicexhibits.com




# **General Setup Instructions**

- Read entire setup instruction manual prior to unpacking parts and pieces.
- The setup instructions are created specifically for this configuration.
- Setup instructions are laid out sequentially in steps, including exploded views with detailed explanation for assembly.

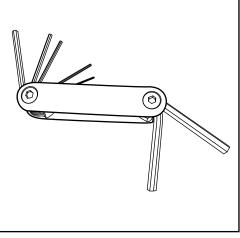

Hex Tool - Essential for Assembly

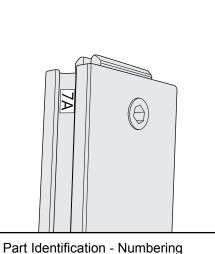






# **Cleaning & Packing**


- For Cleaning Metal, Plex, & Laminate Parts: Use a **MILD NON-ABRASIVE** cleanser and soft cloth/paper towel to clean all surfaces.
- Keep exhibit components away from heat and prolonged sun exposure.
  Heat and UV exposure will warp and fade components.
- Retain all provided Packing Materials. All provided packing materials are for ease of repacking & component protection.

# Disassembly


- For loss prevention, tighten all set screws and locks during disassembly.

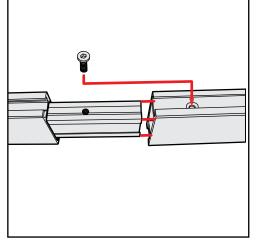


Spline Connection

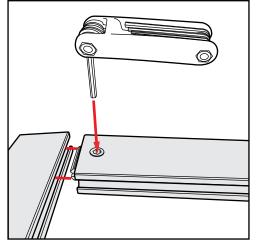

Extrusion & Lock Connection

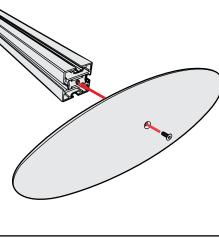

Base Plate & Extrusion Connection

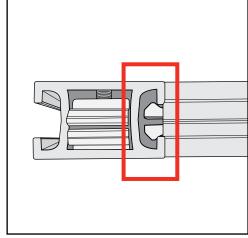

Engaged Lock







### DO NOT USE POWER TOOLS

#### LADDERS OR LIFTS MAY BE REQUIRED

#### ALL CONNECTIONS MUST BE TIGHTLY SECURED